

To adjust pupillary distance,
push barrels down and in or
pull barrels out and up.


To focus binoculars, turn center
focus knob clockwise or counter-
clockwise.



To adjust diopter focus,
turn eyepiece clockwise
or counterclockwise.

To zoom binoculars in
or out, slide lever.

9-27x50 Zoom

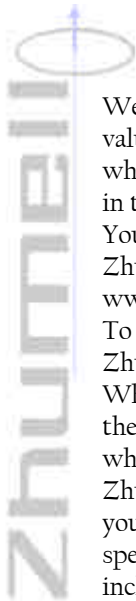

THE ZHUMELL WARRANTY

We have designed Zhumell products to be durable and to offer excellent value. Because we think it is important to stand behind that statement what follows are the details of our warranty, one of the best warranties in the industry.

Your Zhumell has a 25-year warranty. For the warranty to be valid, the Zhumell must be registered. This can be done quickly and easily at www.zhumell.com or by calling: 800.922.2063.

To obtain warranty service the damaged Zhumell must be returned to Zhumell along with \$15 to cover shipping and handling.

When you return your Zhumell to us please send a letter that explains the problem. This is important. Sometimes the problem is obvious as when we open a box and the pieces fall out. However, sometimes Zhumell owners are particular (that is why we love you) and a flaw that you have noticed may be hard to find by our technician. A letter will speed up the warranty process and save a phone call. (Oh, yes, please include your phone number and an address!)

25-YEAR WARRANTY

Since 25 years is a long time, we may have improved or changed our Zhumell products from the time you first obtained yours, therefore it is our option to repair or replace the Zhumells you sent us. (Please note that the maximum limit of liability for losses or damage from any cause shall be the price paid for the Zhumell.)

REPAIR CHECKLIST

- I. Box your Zhumell securely.
- II. Include a note explaining the reason the Zhumell needs repair.
- III. Include your daytime phone number.
- IV. Include an address for returning your Zhumell to you.
- V. Include a check or money order for \$15, made out to Zhumell.

We recommend that you send your unit to us by way of UPS or FedEx. This provides a tracking number should your unit become lost or damaged.

Our address is on the back...

WARNINGS

Viewing the sun can cause permanent eye damage. Never look at the sun through your binoculars.

Never use your binoculars while walking amongst obstacles (i.e., rocky fields, wooded areas, children's playrooms).

Inappropriate use due to a lack of common sense may result in product damage or personal injury.

Objects in binoculars may be farther away than they appear.

Not intended for human consumption.

Zhumell 

30 E. Superior St.
Duluth, MN 55802

Web: www.zhumell.com

CARE OF YOUR BINOCULARS

I. When wiping lenses, use lens cloth included with binoculars or soft, lint-free cloth.

II. To remove any remaining dirt or smudges, use lens cleaner or isopropyl alcohol.

III. Store your binoculars in a moisture-free area.

ADJUSTING DIOPTER FOCUS

I. Focus the binoculars with only your left eye open using the center focus knob.

II. With your left eye closed (right eye open), adjust diopter focus until image is clear. After diopter is adjusted, focus binoculars using center focus knob.